bouncepad

EDDY

Assembly Instructions

No Tools Required Basic Setup


Tools Required to Fix From Above:


- Drill
 4mm Drill Bit
- Pencil
 PZ2 Screwdriver


Tools Required to Fix From Below:

- Drill
 Smm Drill Bit
- Pencil
- Sheet Code: BP-IM-060_REV0 Release Date: 24/03/2020

Copyright 2020 Spotspot Ltd. (T/A Bouncepad) all rights reserved. Confidential, no part of this publication may be reproduced or transmitted in any form without the written permission of the copyright holder.

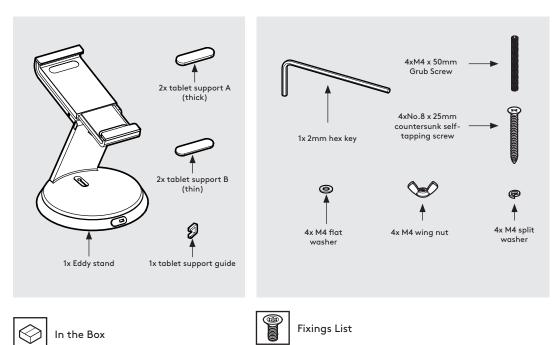


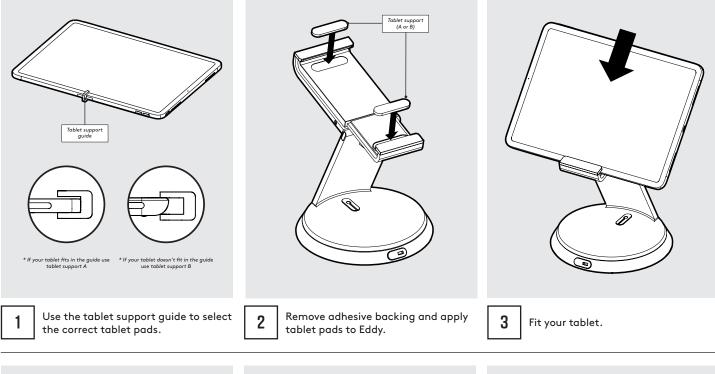

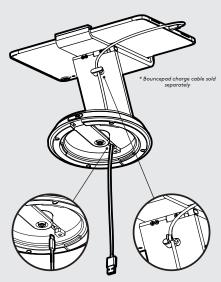

Feed your charge cable through the base and plug it into your tablet. Use the rubber hooks to keep it tidy.

4

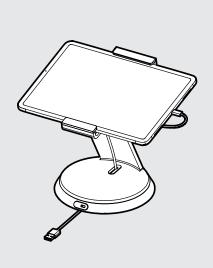

Basic setup is now complete.

to add security features.


5

In the key

Continue with Steps 6 and onwards

6

Use the 2mm hex key to secure your tablet to Eddy.

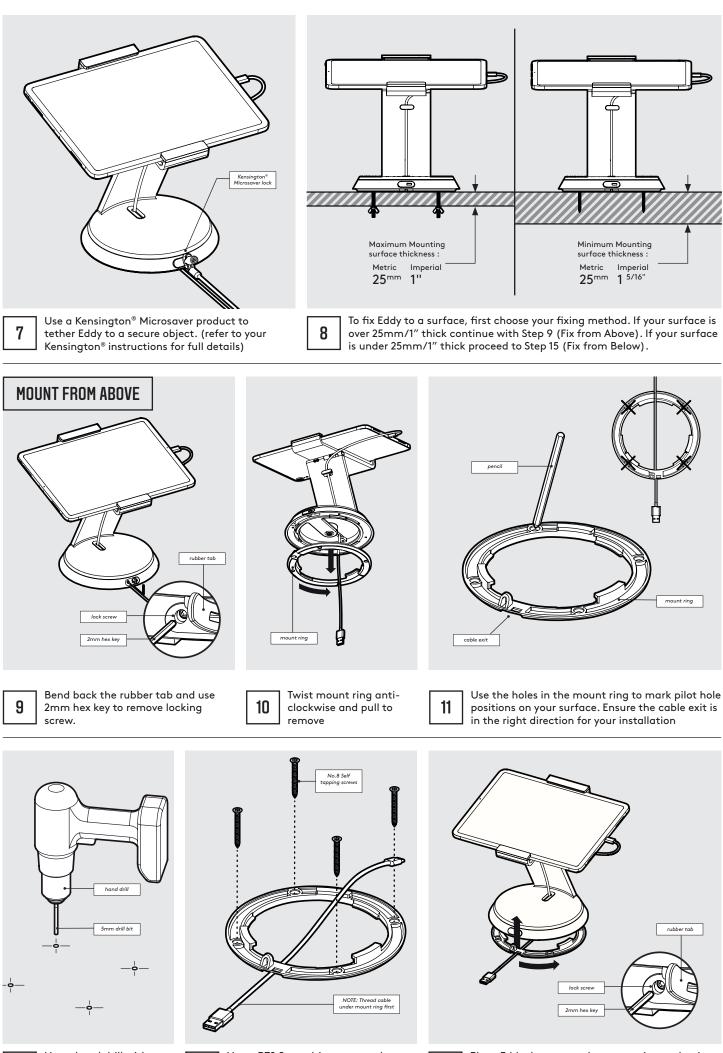


Use a hand drill with 4mm bit to make pilot holes in your surface.

12

Use a PZ2 Screwdriver to attach Mount Ring to surface using No.8 x 25mm countersunk screws

14

Place Eddy down onto the mount ring and twist clockwise. Re-attach lock screw with 2mm Hex key. Eddy is now securely attached to your surface

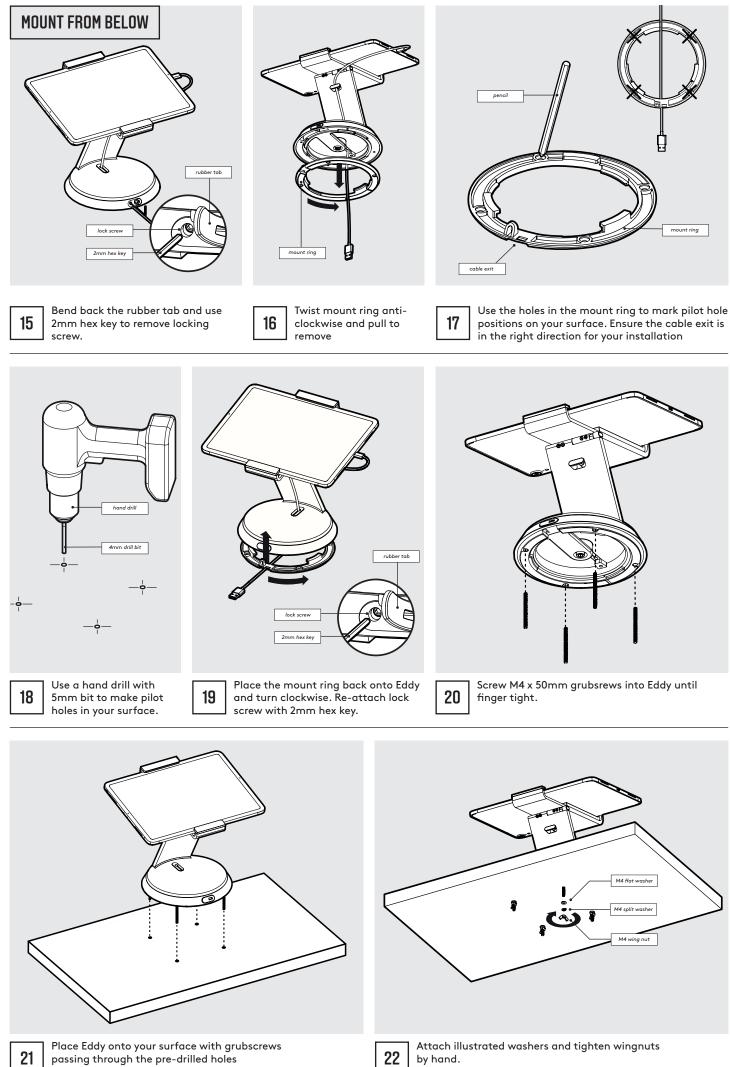

Eddy is now securely attached to your surface.

21